

## BFT MITTO 2 & 4 CODING

### PLEASE NOTE

*New BFT Mitto 2 transmitters do not have a hidden button.*

**BFT MITTO 2 & 4** - Press both buttons 1 & 2 at the same time

**PRESTIGE ROYAL** - Press both buttons 1 & 2 at the same time

### CODING VIA AN EXISTING REMOTE

Locate a Remote already coded to device - Be within 3m of the gate control box

**Original Remote:** Press hidden button on back of remote with a pin or paper clip

Or press B1 & B2 together until remote **LED** lights

**Original Remote:** Momentarily press button that opens device

**New Remote:** Press hidden button on back of remote with a pin or paper-clip

Or press B1 & B2 together until **remote LED** lights

**New Remote:** Press the button on the NEW REMOTE you want to operate device

Wait for device to reset & test - Repeat for as many remotes required - Coding Complete

### CODING VIA RECEIVER LCD SCREEN

*PLEASE NOTE: At least one Remote must be already coded to device*

Press Programming Button – Red Button 3 - Twice  
Using Red Button 2 - Scroll Down (Red Button 1 = Scroll Up)  
to the Radio (RADio) menu item

Press OK = Red Button 3

Menu shows Start – Press OK = Red Button 3

Menu says Hidden Button

Press hidden button on back of **Original Remote** with  
a pin or paper-clip - Or press B1 & B2 together until remote **LED** lights

Menu will show Released – Then Desired

Press the button on the **New Remote** you want to activate  
the device until menu says OK. Menu moves to add

Press OK = Red Button 3

And repeat for further remotes

Or, Press Red Button 1 & 2 buttons together to end

*Note: Some equipment supplied by selected stockiest may be totally electronically programmed. The receiver will only pair with transmitters that have been coded with this device. If you cannot code the remotes, then they must be programmed by a BFT supplier using a special computer based programming tool*